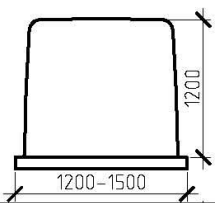
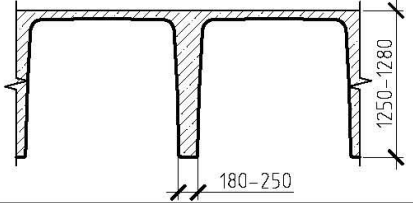
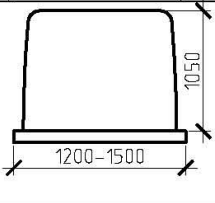
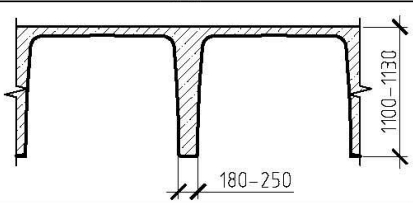
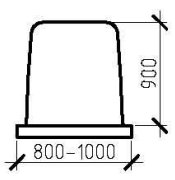
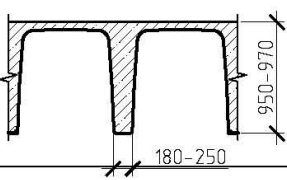
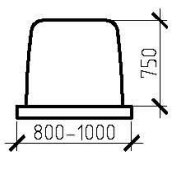
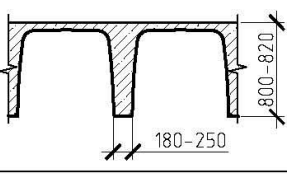
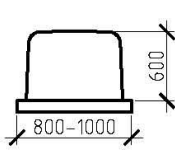
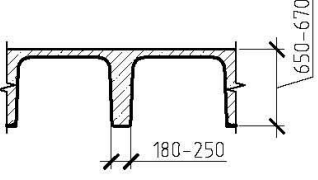
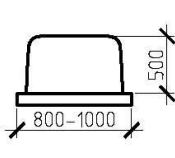
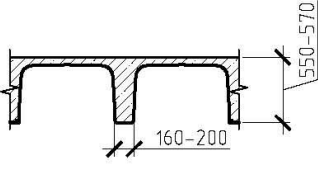
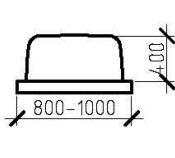
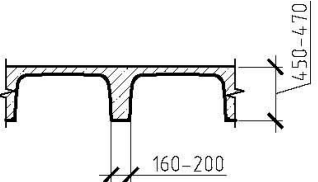
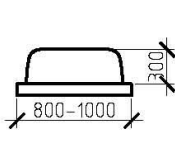
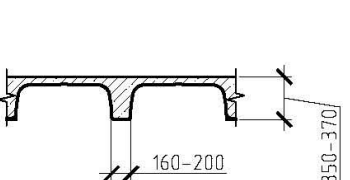


Кессонные перекрытия

Автор: Илья Лоскутов

Рекомендуемые размеры кессонных перекрытий

Опалубка	Конструкция перекрытия	Шаг между колоннами, м	Полезная нагрузка, кг/м.кв.
		34x34	700
		30x30	1500
		25x25	2500
		30x30	700
		25x25	1500
		20x20	2500
		25x25	700
		20x20	1500
		15x15	2500
		21x21	700
		18x18	1500
		15x15	2500
		18x18	700
		15x15	1500
		12x12	2500
		15x15	700
		12x12	1500
		9x9	2500
		12x12	700
		9x9	1500
		6x6	2500
		9x9	700
		6x6	1500

- <http://alarconasociados.virb.com/logytel>
- [Economic Concrete Frame Elements to Eurocode 2](#)
- [Р. А. Сагадеев. Современные методы возведения монолитных и сборно-монолитных перекрытий](#)

[ПЛИТЫ, КЕССОНЫ](#)